



MEMO 66
TSS 20 FA
MOUNTING A STAIR FLIGHT
DESIGN

Dato: 10.04.2015
Siste rev.: 25.05.2016
Dok. nr.: K3-10/66E

Sign.: sss
Sign.:
Control: ps

MOUNTING A STAIR FLIGHT WITH TSS 20 FA

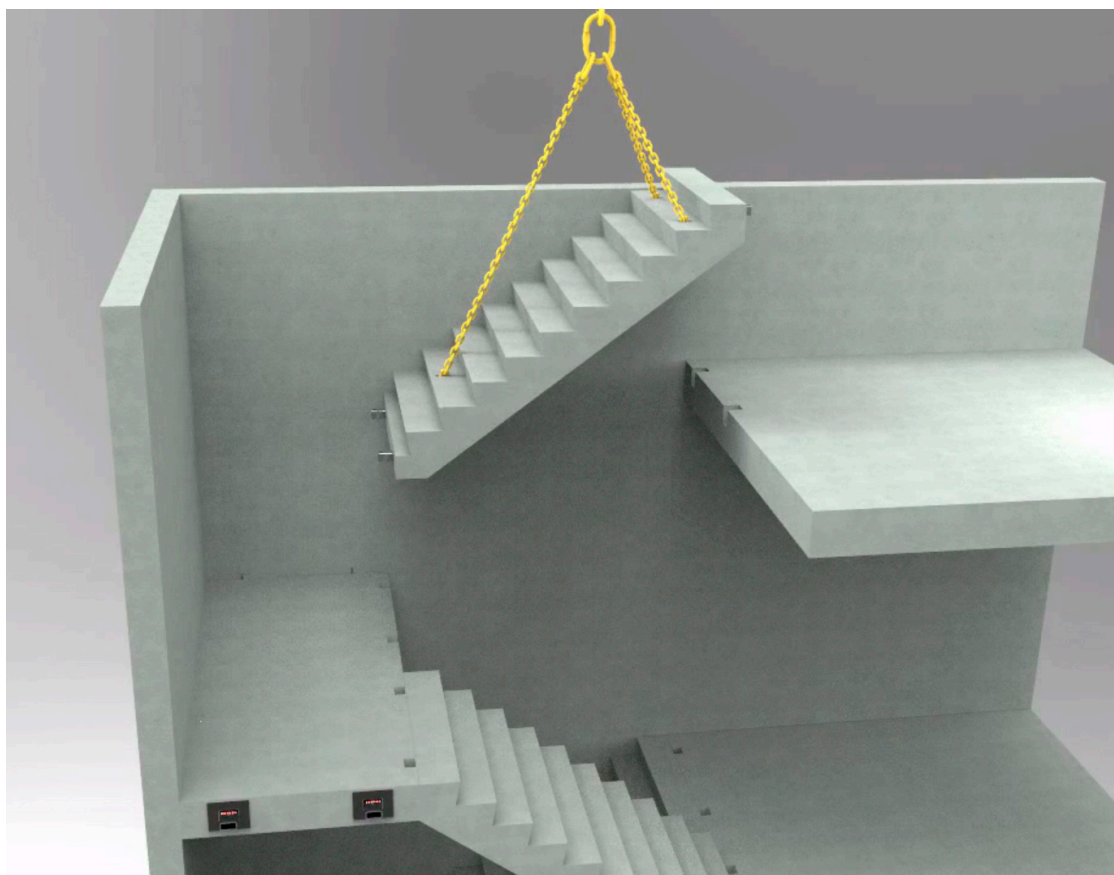

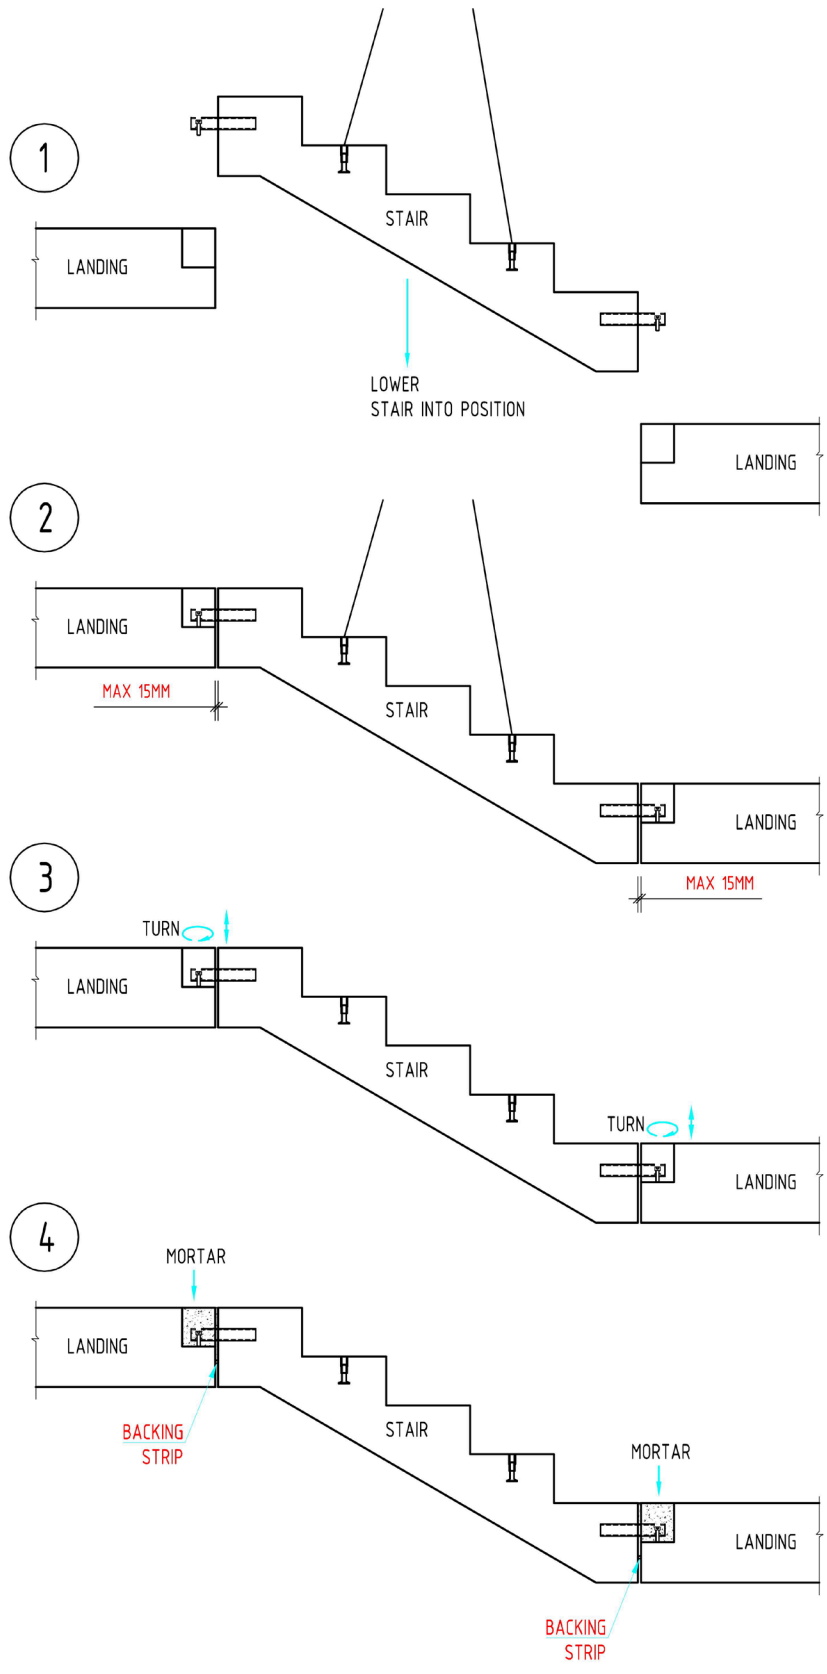

- MEASURE THE GAP BETWEEN THE STAIR AND THE LANDING IN BOTH ENDS BEFORE UNHOOKING THE STAIR FROM THE CRANE.

-ALIGN THE TOP OF THE STAIR ACCURATE WITH THE TOP OF THE LANDINGS BY SCREWING THE M12 BOLTS UP/DOWN.

-INSERT A BACKING STRIP IN THE GAP AND FILL WITH MORTAR TO SEAL THE CONNECTION

| REVISION | |
|------------|----------------|
| Date: | Description: |
| 10.04.2015 | First edition. |
| 25.05.2016 | New template. |